

Magicminer Product Series



Scan to view the full Magic
Miner product brochure (PDF)



Scan for detailed specs and
purchasing info of this product

《 Alet ' s Mining · Cultivation Manual 》

— Personally taught by Alet, the Sage of Fire . —

“In the name of fire, control the nucleus of hashrate.”

My name is Alet, the Wise Man of Fire. From this day forward, I guide you into the deeper realms of alchemy, forged by the SHA-256 algorithm. Awaken the inner fire, unleash the soul of the miner, and master the truth of efficient returns.

Flame Grades · Tier Overview

Version	Model	HashRate	Power
Gray	BG01	4.5 TH/s	120W+10%
Silver	BG02	7.0 TH/s	≤ 170W
Golden	BG03	12.0 TH/s	≤ 200W
Mysterious	???	???	???

It is said the “Diamond Tier · Spiritual Flame” is the ultimate relic in the Flame Realm. Those without the inscription shall not attempt to invoke it.

《 Volume I 》

— the origin of the flame core · Foundational Knowledge —

Alet Graphics Card Mining Machine, an artefact with a heart of fire and a bone of stability, specialised in refining the SHA-256 cryptographic algorithm and extracting the essence of digital ores (BTC / BCH...).

Its flame core is composed of ASIC stones, adapted to PC hosts, GPU racks, and the array of servers, and it has been refined for a long time, with constant gains. The version you are holding is: Silver Order - Blazing Flame Spirit Weapon (if not shown in the inscription, please refer to the Flame Score for details).

《 Volume II 》

— Fire Spirit Set · Unsealing of fixtures —

Each practitioner must make sure that the flame loadout is complete before opening the box:

- ☒ 【Master Spirit Device】 Alet ASIC Graphics Card Miner ×1
- ☒ 【Power Source Line】 6pin/8pin Power Cable ×1
- ☒ 【Secret Book Volume】 Alet Flame Mining Technique ×1

《 Volume III 》

— Ritual of Ignition · Installation Method —

Follow the sacred ritual with calm mind:

1. Seal the Furnace: Power off the host and wait until energy is fully dissipated.;
2. Insert the Flame Slot: Securely insert the main device into the PCIe slot;
3. Infuse Spirit Energy: Connect the power source, ensuring at least 1300W of stable supply.
4. Connect Flame Network: Link to the network to channel into the mining pool.

A If using Ethernet: please plug the cable into the connector at the back of the host, The Ether line shall channel flame to the pool.

B If using WiFi : Enter the system interface, select the WiFi named Flame Signal Channel,enter the key to connect.

C “One wire to awaken the spirit—mining never ceases. The network is the oxygen to the furnace — never let it be severed.

5. Awaken the Host: Restart the power, the flame core shall arise.;
6. Configure the Furnace: Input mining pool address, public key, and wallet rune.
7. Begin Refinement: Run the mining software and let the hashrate burn like fire.

《 Volume IV 》

— Way of Flame Stability · Operation Guidelines —

- 1 Thermal Force: Maintain ambient temperature $\leq 35^{\circ}\text{C}$, ensure proper airflow.
- 2 Energy Stability: Use high-quality power sources to prevent voltage surges.
- 3 Dust Purification: Regularly clean fans and heatsinks to prevent flame from dying.
- 4 Daily Recitation: Manual may be updated; true knowledge evolves.
- 5 Local Control First: Alet opposes remote control—only your hands may command the flame

《 Volume V 》

— Extinguishing Curses · Troubleshooting —

SYMPTOMS	RESPONSE	CAUSE
No Start	Check power and connections reignite	Loose power or no energy
Weak Flame	Recheck settings, re-enter mining incantation	Incorrect configuration
Overheating Flame	Clean dust, improve airflow	Poor ventilation
Random Restarts	Replace with higher-quality PSU	Unstable voltage

《 Volume VI 》

— Flame Inscriptions · Technical Specs —

- 1 Algorithm: SHA-256 (chain genus BTC/BCH...)
- 2 Arithmetic power: 7.0 TH/s ($\pm 5\%$)
- 3 Energy consumption: about 160W
- 4 Interface specification: PCIe xl6 + Flex Cable (8pin [3+5])
- 5 Dimensions: Standard graphics card (263 x 108 x 50 mm)

《 Volume VII 》

— Flame Oath · Warranty & Support —

- 1 Tech Inquiries: support@Magicminer.cc
- 2 Community of Fire Cultivators: Scan to join “Flame Source Arts Society”
- 3 Warranty: Core components covered for 6 months; extension available
- 4 Official Website: www.magicminer.cc

May you wield flame as blade, computation as soul
and forge eternal golden fire amidst the blockchain inferno

— Alet · Sage of Fire —



Scan for after-sales support and
FAQs for quick troubleshooting



AUS Support Center
Scan for local repair & warranty services



Magicminer



SILVER

AELT

FLAME CORE ARTISAN



MM-001-AG

User Manual



Magicminer



SILVER

AELT

FLAME CORE ARTISAN

AELT is a fiercely passionate strategist, driven by impact and immediacy. He trusts action over words and burns brightest under pressure.

Fliffy A a spirited fire fox, whose tail burns as hot as AELT's determination,



Power 53



Logic 30



Control 80



Defense 96



MM-001-AG